

# SKY cable iRECORD


QUICK START GUIDE



# Getting Started

Your quick start guide to your **SKY**cable HD iRecord

## BACK PANEL

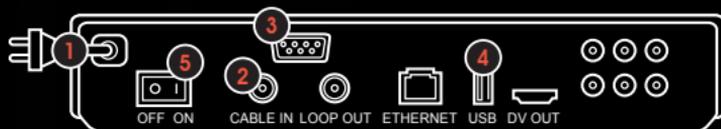

## FRONT PANEL



- 1 Plug your DigiBox into a **POWER** outlet.
- 2 Plug your cable wire into **CABLE IN** port.
- 3 Plug your HDMI cable in the **HDMI** cable box port that is attached to your HD ready TV.
- 4 Attach a hard drive\* into either one of the **USB PORTS**.
- 5 Turn the box **ON**. For first time subscribers, you will need to autoscans your channels.

\* External hard drive not yet included



# Remote Control Unit

**USE COLORED  
BUTTONS AS  
INSTRUCTED ON  
SCREEN**

## **LOCK**

Press to lock a recorded video; press again to unlock and key in password

## **RECORD**

Press to start recording

## **PLAY**

Play out a recorded file or a paused Live TV program

## **PAUSE**

Freeze LIVE TV program or recorded videos

## **EPG**

Press to display 7-day program schedule. You may choose a show to record on this page.

## **FAVORITES**

Press to mark favorite scenes on playback mode

## **BACK**

Press to return to previous page

## **SET**

Go to a specific scene on playback mode

## **STOP**

Stop playback or recording

## **REW/FFW**

Fast rewind or forward recorded videos. Press the FFW once to watch the scenes in slow motion



Enjoy your **SKY**cable iRECORD!

# RECORD

**Record your favorite shows  
and programs so you can watch  
them later on.**

## **Record on the Spot**

- Simply press **REC** to record what you are watching.
- Press **STOP** button anytime you want to end recording.

**Note: Channel surfing is limited while recording is on-going.**

## **Schedule a Recording**

- Press **EPG** to choose channel and shows you want to record and then press **REC**. **SKY**cable iRecord will record as scheduled.

**- or -**

- Press the **MENU** button ⇨ iRecord Icon ⇨ Manual Recording. Choose the channel, date, time and frequency you want to record then press **REC** button.

**Note: Please leave DigiBox plugged into the power outlet for the scheduled recording to kick in.**

**Channel schedules subject to change without prior notice**

Enjoy your **SKY**cable iRECORD!

# **PLAYBACK**

The Playback option gives you the power to enjoy your recorded video with several exciting functions!

## **Slow Motion**

- Press **FFW** button once to view your recording in slow motion.

## **Bookmark a Video**

- Press **FAV** button to bookmark favorite scenes you want to go back to again and again.

## **Rewind and Fast Forward**

- Press **REW/FFW** buttons to fast rewind or forward recorded videos. You may choose rewind or fast forward speed from 2x to 32x.

Enjoy your **SKY**cable iRECORD!

# || PAUSE

The **Pause** button allows you to pause live TV and attend to something else

## Pause a Show

- Press **PAUSE** to pause Live TV and take that important call or to grab a snack.

## Continue a Show

- Press **PLAY** to resume the show where you left off. Press **STOP** to exit pause mode and return to real time viewing.

## Option for Saving

- Upon exiting the pause mode, you may save or discard the recorded content.

## Important things you should know about your



① **Q: Can I do simultaneous recording?**

**A:** No. This iRecord model can only support recording of one channel at a time. But one can schedule a recording while recording an ongoing show.

② **Q: Can I play the videos I recorded in iRecord on my laptop or another iRecord unit?**

**A:** No. The recorded shows in your hard drive can only be played in the iRecord you used to record a show.

③ **Q: What is the recommended hard drive size for recording?**

**A:** The recommended hard drive size is 320 GB and up for optimal recording and playback.

④ **Q: How do I eject my hard drive?**

**A:** It is recommended to turn off the switch /pull out the power plug at the back panel before pulling out the hard drive to protect the hard drive from damage.

⑤ **Q: How do I view my pictures in the hard drive using my iRecord unit?**

**A:** Press Menu then choose iRecord then select Photo Viewer.

⑥ **Q: How do I play my audio files?**

**A:** Press Menu then choose iRecord then select Music Player

⑦ **Q: Can I surf across all channels when recording a show?**

**A:** No. Our cable network is made up of many channel groupings. Each group of Standard Definition channels has 6 channels in it, while each group of HD channels has 3 channels in it. When recording a show you will only be able to view the channels within the same channel grouping of the show you are recording.



Imagine what you can do.

Call 381 0000

[mysky.com.ph](http://mysky.com.ph)